


Wooerful life™

Photo Frame Round Music Box · How to fix music movement


Step 1

Follow the marking to place music movement on the inside plate.

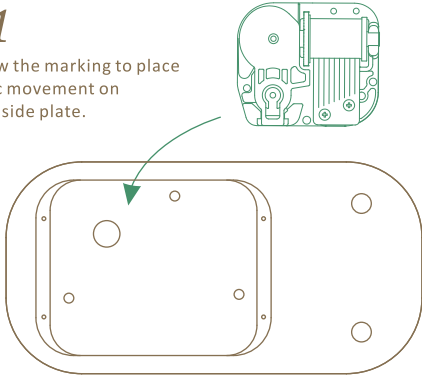


Step 2

(1) Turn the plate over. Fasten music movement by 2 A screws.

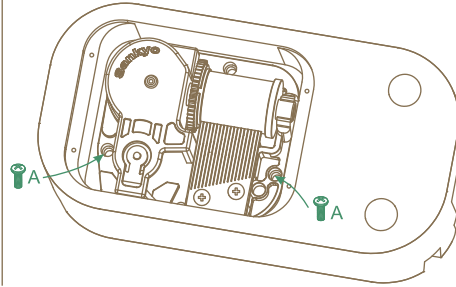


(2) Fasten screw C (the short one).

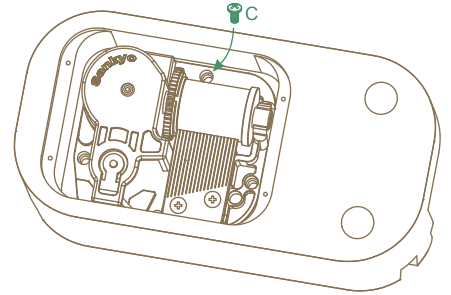


Step 3

Put the inside plate into basement and follow the arrow to screw B (thin and gold one).

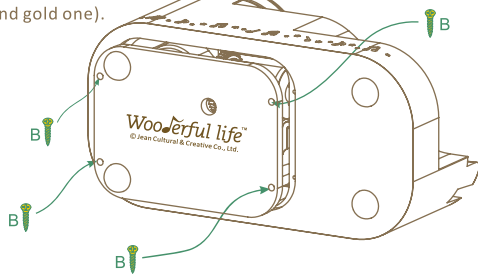


Step 4

Freely decorate!

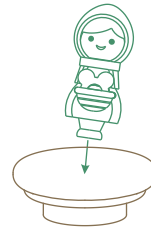


The yellow areas are not easy to drill, recommend to fasten the DIY parts by instant glue.

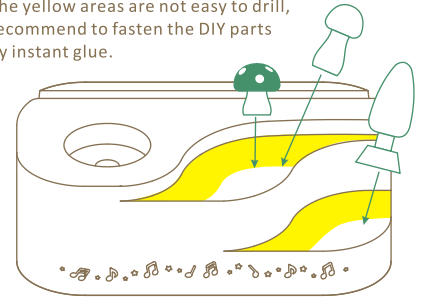

Step 5

Tighten the plate fixture to the bottom of plate by screw B (thin & gold one).

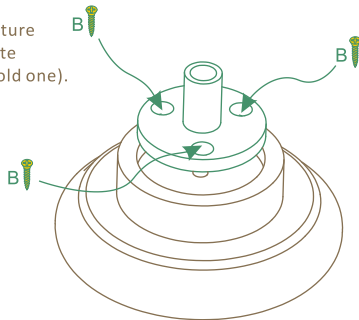

Step 6

Assemble the plate with the base and tighten clockwise.

